



# Radio Antenna Relocation Bracket Assembly

## Antenna Installation Considerations

### Vest Antenna Bracket

**MODEL NUMBER: VTAB-SF-B / T**

**VTAB-SU-B**

**VTAB-BA-VHFL**

#### VERIFY:

1. **Parts List:** The package includes an antenna mount assembly installed on a MALICE clip for attachment on a tactical operation vest. Included is approximately 3ft of cable with a screw-in connector assembly for the radio. Use only the components supplied with the antenna system. VTAB-SU-B also includes two adapters, one right-angle BNC-F to BNC-M, and one BNC-F to SMA-F.
2. **Frequency and Bandwidth:** The frequency is determined by the radio and antenna used. The bandwidth varies depending on the frequency.


#### INSTALLATION:

3. **Placement:** Select a desired location on the vest for the antenna.
4. **How to install:** Open the MALICE clip and slide the cable through the appropriate loop locations on the vest



5. **Run Cable:** The cable kit has a screw-in radio connector already installed. Run the cable to the radio and screw the connector into the radio antenna connector (see figure below). If necessary, use supplied adapters to connect to radio.

Do not twist boot

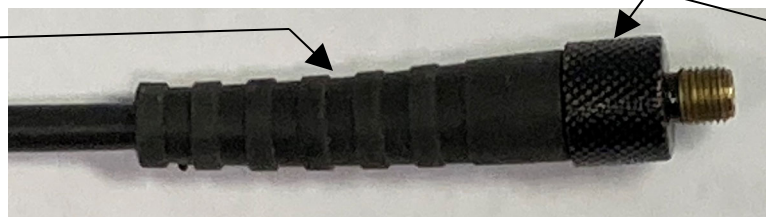

Grip and turn knurled connector when attaching to radio

6. **Cable Cutting:** DO NOT CUT THE CABLE.